


Hardware:



#8 Screw
Qty. 4



Drywall Screw
Qty. 1



Wall Anchor
Qty. 4

Installation Tips:

- Preferred method of installation is to screw directly to wall studs.
- The provided anchors are intended for wall mounting when not utilizing wall studs. In this case, use of all four wall anchors are required.
- Ultimate holding value is determined by age, condition and capacity of wall material and installation type.

Suggested Tools:



3/16" Drill Bit




Bubble Level



Phillips Screwdriver

Assembly:


- 1 After removing contents from box, place the wall mount bracket at desired height. Use a level to ensure bracket is straight.

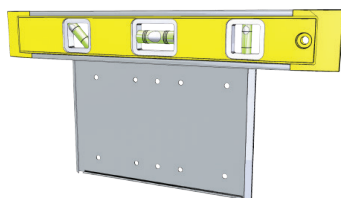

TIP: Use a pencil to mark the location of the screw holes at each corner of the bracket.

- 1a If not screwing directly into studs, use a 3/16" drill bit to drill holes for each wall anchor. Insert a wall anchor into each hole.

- 2 Use the #8 screws to secure the wall mount bracket to the wall.

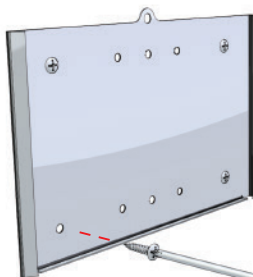


4x


IMPORTANT: Phone/tablet charging only.
Not compatible with laptops.

Assembly Continued:


- 3 Attach the charging station by sliding the technology box down the grooves at the edges of the wall mount bracket.

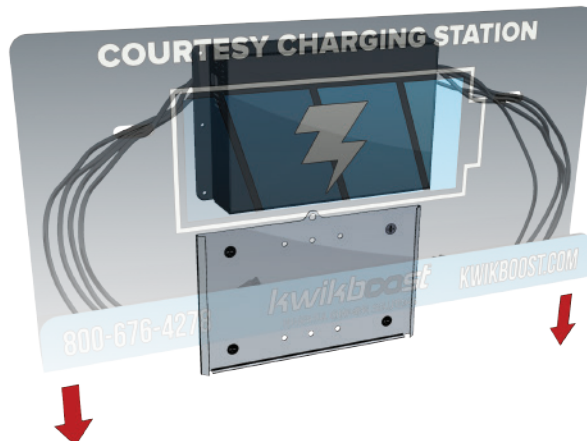

- 4 Drive the drywall screw into the hole at the top of the wall mount bracket.

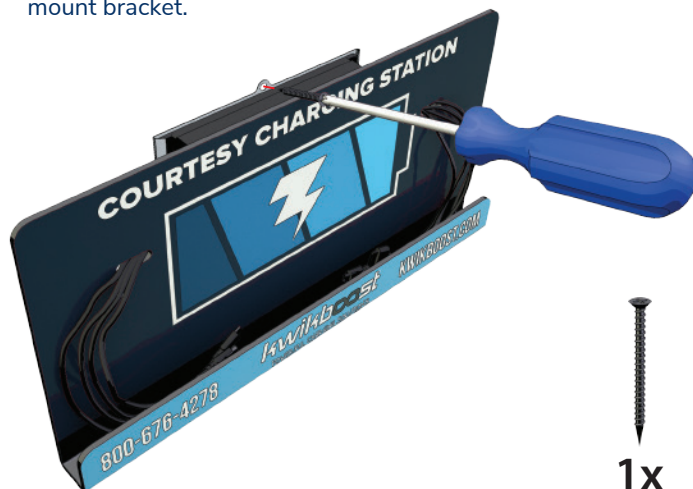

- 5 Now that the charger is secured to the wall, it can be plugged in. The power cable will plug into the bottom of the charging station and into any standard wall outlet or power strip.

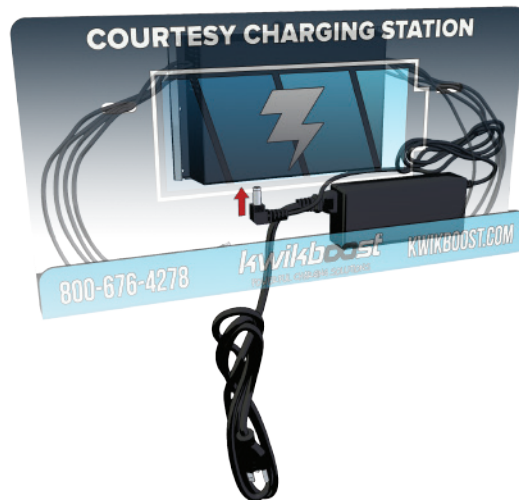

Need more info?